ROLLER SHADES · PRODUCT BROCHURE

ES Wand

Easy Spring Wand roller shade



CLOSE-UP

Finished shade: end cover, wand and bottom bar

30″–90″	120″	Auto-rise
Finished width	Maximum height	To your preferred top position

A smooth, chain-free roller shade, operated by its wand or directly from the shade. Semi-automatic rise, an adjustable top limit and an integrated decelerator keep every movement controlled.


01 Features

- ✓ **Wand or shade operation.** Lower with the wand or the bottom bar; the shade locks where you let go.
- ✓ **Semi-automatic rise.** A light tug and the spring returns the shade to its preferred top position.
- ✓ **Integrated decelerator.** Keeps every rise steady and controlled, never abrupt.
- ✓ **Adjustable top limit.** Set at the idler end to suit each window.
- ✓ **Reach without effort.** The 30″ wand lifts shades up to 120″ high with a single pull.
- ✓ **Chain-free window.** No loops or chains at the window; control on the left or right.

02 At a glance

Operation	Spring auto-rise, by wand or bottom bar
Wand	30″, fixed to the control
Roller tube	1-1/2″ [38 mm] minimum
Mounting	Steel brackets: inside, wall or ceiling
Options	Bracket covers; oval or C20 bottom bar
Housings	Open roll, groover, 4″/5″ fascia, C100, S90, square cassette
Documents	SD-RS-ESW · IG-RS-ESW

03 Inside the system

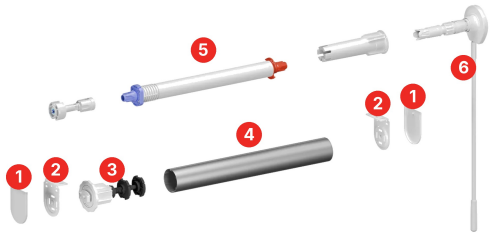

1. End covers **3.** Top limiter **5.** Spring
2. Brackets **4.** Roller tube **6.** Wand drive

Canadian Blind Manufacturing Inc.
13040 Worster Ct, Richmond, BC V6V 2B3
604.821.1188 · Toll-free 1.888.982.0888
sales@cblind.ca · cdnblind.com