5″ Fascia System Roller Shades

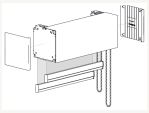
Double shades and single HD shades · chain drive or motorized

⚠ WARNING


STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 8-11/16″ [22 cm] or a loop larger than 17-5/16″ [44 cm] around becomes accessible.

Keep cords, chains and loops out of children's reach. Move cribs, beds and furniture away from window coverings.


01 What's in the box



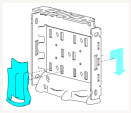5″ fascia panel, two brackets and two bracket covers. The shade comes fully assembled.



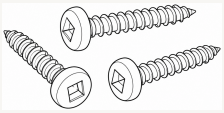Chain drive: the chain diverter (and its cover on small clutches)




Installation screws (1-1/8″ pan-head, #2 Robertson)


Tools you need: Drill with bits · tape measure · pencil · level · #2 Robertson (square) driver · hex key (single HD shades).

02 Before you start

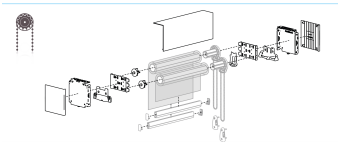
Find your shade below. Steps marked **A**, **B** or **C** apply only to that shade; everything else applies to all.



A Clutch drive, double shade

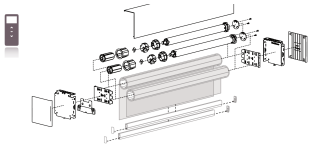

B CBM motor, double shade

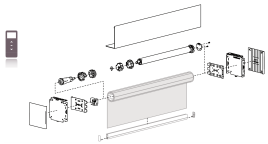

C CBM HD motor, single shade

Brackets

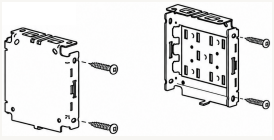
Each shade hangs on **two brackets, one at each end**. The brackets are universal: the same bracket works for wall, inside or ceiling mount. Mount them so the fascia ends line up with the ends of the opening or your marks.

Check that window cranks, handles and locks will not get in the way of the shade.


Important Brackets that are not level and in line make the fabric drift to one side and can damage it.

03 Install the brackets


One bracket at each end, two screws per bracket. Check with a level that both brackets are level and in line.



Wall mount

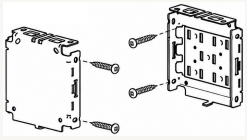

Inside mount




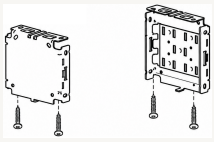


Ceiling mount





04 Hang the shade

Keep the shade rolled up and support its weight until both ends are seated.

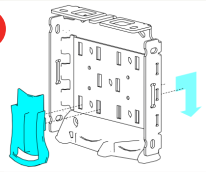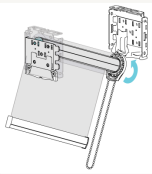
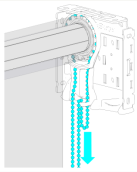
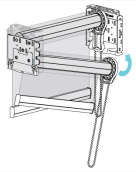
A Clutch drive, double shade

1. 
   Snap the chain diverter onto the control-side bracket: push its hooks through the bracket and pull down.
2. 
   Put the pin end of the top (back) roller in first, then swing the control end up and hook it on.
3. 
   Pull both chains down through the diverter.
4. 
   Small clutches only: fit the diverter cover. Check that both chains hang straight.

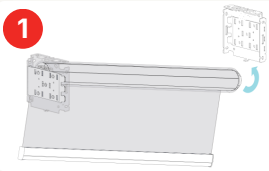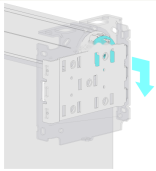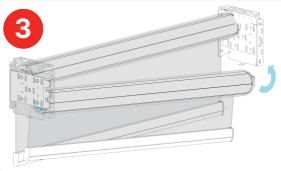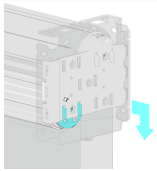B CBM motor, double shade



1. 
   Put the pin end of the top (back) roller in first.
2. 
   Hook the motor end on: push the hooks through the bracket and pull down.
3. 
   Put the pin end of the bottom (front) roller in.
4. 
   Hook its motor end on the same way.

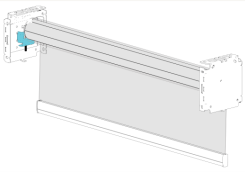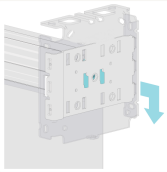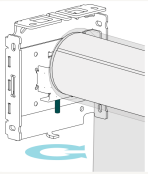C CBM HD motor, single shade

1. 
   Put the pin end in first.
2. 
   Hook the motor end on: push the hooks through the bracket and pull down.
3. 
   Turn the yoke screw with a hex key until the shade is level.

✓ **Pull gently on each roller to check that it is locked in.**

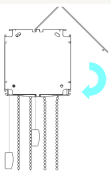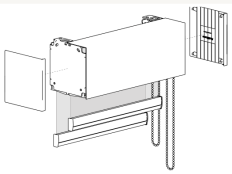05 Fit the fascia and bracket covers

1. 
   Hook the top of the fascia panel on first, then swing it down into place.
2. 
   Outside mount: push a bracket cover onto each end.

06 Take the shade down

1. Take off the bracket covers, then lift the fascia panel up and off.
2. Support the shade. At the control end, lift the hooks up and out of the bracket.
3. Lower the control end, then slide the pin end out. Double shades: remove the front roller first.

07 Operate the shade

Chain drive: pull the front or back of the chain straight down to raise or lower the shade; keep the chain out of reach of children. Motorized: see the motor's programming instructions.

08 Care and cleaning

- Dust the fabric and the fascia regularly with a feather duster, or vacuum on low suction with a soft brush attachment.
- Spot clean with a cloth dampened with water and mild soap. Blot, do not rub, and let the shade dry fully lowered.
- Do not soak, machine wash, steam clean or dry clean the fabric. Do not use solvents or bleach.

09 Installer tips

- Pre-drill and drive the screws flush: a raised head rubs on the clutch or motor. Shim brackets on uneven surfaces.
- Pin end first, then hook on the control end and pull down until it locks; it should point straight down.
- Double shades: hang and test the back shade first, then the front. Take down the front one first.
- Motorized: charge, set the limits and test the motor before you fit the fascia panel.
- Chain drive: push the diverter down until it clicks, and centre the chain in its channels.
- Single HD shades: level the shade with the yoke screw (04, C) before you fit the fascia panel.
- Fascia panel last: hook the top lip on, swing it down, press until it snaps in.

10 Troubleshooting

Problem	Possible cause	What to do
The control end won't hook on	Pin end not seated first, or hooks not pushed fully through	Seat the pin end first, then push the hooks through and pull down until they lock (04).
Shade out of level, or fabric rolls to one side	Brackets not level or in line; HD: yoke not set	Level the brackets (shim if needed). Single HD: turn the yoke screw (04, C).
The two shades rub, or the front one won't fit	Shades hung in the wrong order	Take down the front shade, check the back one is seated, then hang the front one (04).
The shade won't seat, or the chain slips out of the diverter	Diverter not snapped in, or chain off-centre	Push the diverter down until it clicks; centre the chain (04, A).
The fascia panel sits crooked or won't snap on	Top lip not hooked on, or brackets not in line	Hook the top lip on, swing down, press until it snaps. Check the brackets.
The motor doesn't respond or stops in the wrong place	Battery low, remote not paired, or limits not set	Charge, pair and set the limits (see the motor's instructions).

CBM

Contact

Canadian Blind Manufacturing Inc. · 13040 Worster Ct, Richmond, BC V6V 2B3
604.821.1188 · sales@cblind.ca · cdnblind.com

#cbmblinds