AR Cordless Roller Shades


Spring and brake cordless system

⚠ WARNING

STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 8-11/16″ [22 cm] or a loop larger than 17-5/16″ [44 cm] around becomes accessible.

Keep cords, chains and loops out of children's reach. Move cribs, beds and furniture away from window coverings.


01 What's in the box

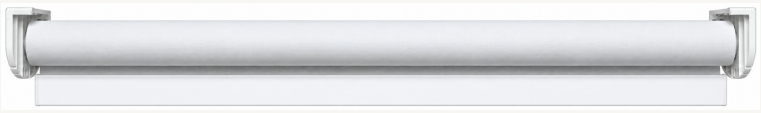

Shade, fully assembled



Left and right brackets, with 2 end pins

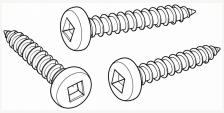

Installation screws (#2 Robertson), 2 per bracket

Tools you need: Drill with bits · tape measure · pencil · level · #2 Robertson (square) driver.

02 Before you start

Bracket position




The shade has a spring end (**left**) and a brake end (**right**), with one bracket at each end. **Inside mount:** place a bracket against each side of the window frame. **Outside mount:** place the brackets so the distance between their outside edges matches the ordered width.

Check that window cranks, handles and locks will not get in the way of the shade.

Important Brackets that are not level and in line make the fabric drift to one side and can damage it.


03 Install the brackets

Mark the positions. Use a level to check that both brackets are level and in line.

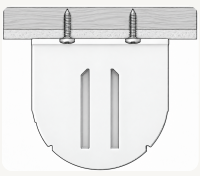

Ceiling mount

Two screws up through the slotted holes in the top of the bracket, into the top of the frame or the ceiling.

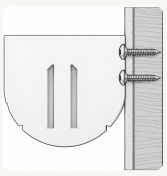

Wall mount

Two screws through the back of the bracket, into the wall or trim.

Tighten both screws in each bracket fully.

04 Hang the shade

Before you start, check that the shade is rolled all the way up.


Important Keep the shade rolled all the way up while you slide it in. Where the shade sits when it goes into the brackets becomes its upper limit.

1



Insert the end pins into the left and right ends of the shade until fully seated. The shade cannot slide into the brackets without them.

2

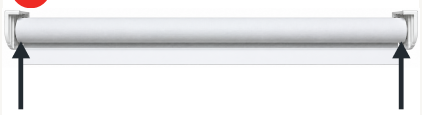

With the shade fully rolled up, slide the left end (spring end) up into the left bracket until it latches, then the right end (brake end).

3



Each end pin sits in the channel of its bracket, with the latch clicked in.

✓ **Pull gently on the bottom bar to check that both ends are latched.**

05 Operate the shade



Handle (C20 silent bottom bar, if ordered)

The handle ships separately. Clip it onto the centre of the C20 bottom bar as the last step, before you use the shade.

Hold the bottom bar at its centre, or by the handle, and move the shade up or down. The brake holds it wherever you stop.

You can also reach the handle with an extendable pole (sold separately).

Note No adjustment is needed: the spring is set at the factory. The top limit is where the shade sat when it was slid into the brackets.

06 Take the shade down



Raise the shade fully and support it. At the right end, press the latch on the end pin inward and slide it down out of the bracket. Repeat at the left end.

07 Aluminum cover (if ordered)

Hook the top of the cover over the brackets, then swing the bottom in until it clips into place.

08 Care and cleaning

- Dust regularly with a feather duster, or vacuum on low suction with a soft brush attachment.
- Spot clean with a cloth dampened with water and mild soap. Blot, do not rub, and let the shade dry fully lowered.
- Do not soak, machine wash, steam clean or dry clean the fabric. Do not use solvents or bleach.

09 Installer tips

- Hang the shade fully rolled up: the position it is hung in becomes the upper limit.
- Check that each end pin has latched in its bracket channel before you let go of the shade.
- Run the shade fully down and up 3 or 4 times after hanging: a new shade settles in and often holds its position better afterwards.
- Guide the shade up to where you want it and let go. Do not throw it up or let it snap to the top.
- Before a wide inside mount, check the clearance at each end so the fabric and end pins do not rub on the frame.

10 Troubleshooting

Problem	Possible cause	What to do
The fabric drifts to one side	Brackets not level or not in line	Take the shade down, level and line up the brackets, then hang it again.
The shade does not stay where you leave it	New shade, or the shade was pulled from one side	Lower and raise the shade fully 3 or 4 times, from the centre of the bottom bar. If it continues, contact your dealer.
The shade comes out of the brackets	An end pin not latched	Check that both end pins are fully seated in the shade. Roll the shade fully up, then hang it again: left end first, sliding each pin up until it latches.
The shade does not go up far enough	It was not fully rolled up when hung	Take it down, roll it all the way up by hand, and slide it back into the brackets.
The shade sticks or stops partway	Fabric or ends rubbing on the frame	Check the clearance at each side of an inside mount.
The fabric rolls unevenly or the edges fray	Shade pulled from one side, or brackets not level	Level the brackets (03). Lower the shade fully, then raise it slowly from the centre of the bottom bar.
The shade creeps up or drops after you let go	Shade still settling, or operated from one end	Run it fully down and up 3 or 4 times from the centre. If it continues, take it down and re-hang it fully rolled up (04).
No resistance, grinding or a loud pop	Spring or brake damaged	Stop using the shade and contact your dealer. Do not take the shade apart.

CBM

Contact

Canadian Blind Manufacturing Inc. · 13040 Worster Ct, Richmond, BC V6V 2B3
604.821.1188 · sales@cblind.ca · cdnblind.com

#cbmblinds