C100 and S90 Cassette Roller Shades

Round cassette C100 · S90 cassette

⚠ WARNING

STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 8-11/16″ [22 cm] or a loop larger than 17-5/16″ [44 cm] around becomes accessible.

Keep cords, chains and loops out of children's reach. Move cribs, beds and furniture away from window coverings.


01 What's in the box



Shade in its cassette, fully assembled



Universal brackets (number by width, see 02)



Installation screws (1-1/8″ pan-head, #2 Robertson)


Tools you need: Drill with bits · tape measure · pencil · level · #2 Robertson (square) driver · flat screwdriver (to take the cassette down).

02 Before you start

This guide covers both cassettes. They use the same universal bracket and install the same way; only the face is different.

How many brackets

Shade width	Brackets
Up to 36″	**2**
Over 36″ to 72″	**3**
Over 72″ to 96″	**4**
Over 96″ to 120″	**5**

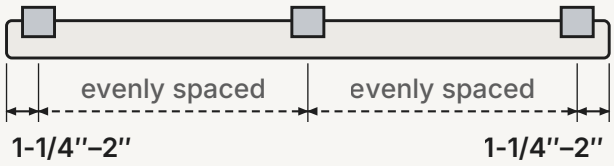

Place the end brackets 1-1/4″ to 2″ [32–51 mm] in from each end of the cassette. Space the others evenly between them.

Cassette size

Cassette	Height	Depth
C100	3″ [76]	3-5/16″ [84]
S90	3-7/16″ [87]	4-1/16″ [103]


Depth is measured to the wall face, bracket included. For a flush inside mount, the window recess must be at least this deep.

Check that window cranks, handles and locks will not get in the way of the shade.

Important Brackets that are not level and in line make the fabric drift to one side and can damage it.


03 Install the brackets

Mark the bracket positions. Use a level to check that all the brackets are level and in line with each other.

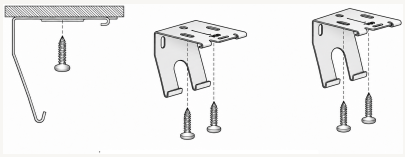

Inside mount or ceiling

Screw up through the holes in the **top** of the bracket into the top of the window frame or the ceiling.

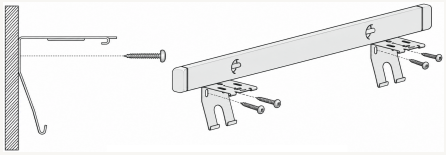


Outside mount (wall)

Screw through the holes in the **back** of the bracket into the wall or trim above the window.

04 Hang the cassette

Make sure the shade is fully raised.


1

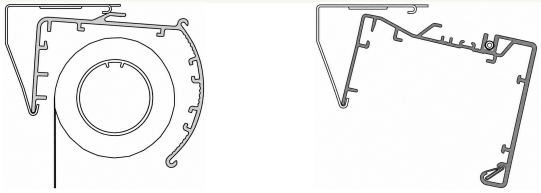

C100 S90

Hook the groove in the back of the cassette onto the bottom of every bracket.

2

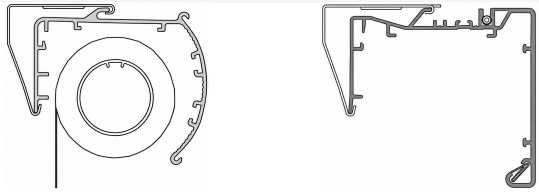

C100 S90


Push the cassette back and up until the top snaps into the bracket.

✓ **Pull gently on the cassette to check that it is locked in.**

05 Take the cassette down


Raise the shade fully and support the cassette with one hand.

1

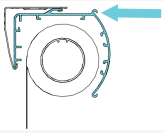

Push the cassette back, toward the wall.


2



Pull the cassette down to release it from the brackets.


If the cassette won't release

a

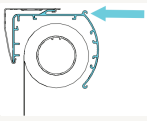


Push the cassette back, toward the wall.

b

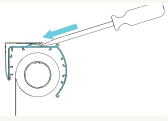


Push a flat screwdriver between the bracket and the top of the cassette.

c

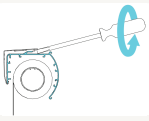

Turn the screwdriver on its axis to release the cassette from the bracket.

d

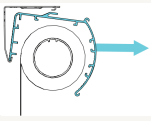

Pull the cassette away from the brackets.

The C100 is shown. The S90 comes off the same way.

06 Operate and adjust the shade

These cassettes take every CBM control: chain drive, ES Wand, Cordless RS, AR Cordless and motorized. To operate and adjust your shade, see the installation instructions for your control. Motorized shades: see the motor's programming instructions.

Adjusting Some adjustments are made at the end of the roller. Take the cassette down (see 05), then take off the end cover on that side. Put it back before you hang the cassette again.

07 Care and cleaning

- Dust the fabric and the cassette regularly with a feather duster, or vacuum on low suction with a soft brush attachment.
- Spot clean with a cloth dampened with water and mild soap. Blot, do not rub, and let the shade dry fully lowered.
- Do not soak, machine wash, steam clean or dry clean the fabric. Do not use solvents or bleach.

08 Installer tips

- Check that every bracket is level and in line before hanging: a cassette that is forced onto one bracket will not snap in on the others.
- Listen and feel for the snap at each bracket, then pull gently down on the cassette to check it is locked.
- On inside mounts, check the recess depth and the clearance at each end before you mark the brackets.
- Keep a flat screwdriver on hand for removal (05); do not pry on the cassette face.

09 Troubleshooting

Problem	Possible cause	What to do
The cassette won't snap into the brackets	Brackets not level or in line, or screws not tight	Check the brackets with a level and tighten the screws. Hook the back groove first, then push back and up.
The fabric drifts to one side	Brackets not level or not in line	Take the cassette down, level and line up the brackets, then hang it again.
The cassette comes off or is loose	Not snapped in on every bracket	Hang it again, checking that the top snaps in at each bracket.
The cassette won't come off	Front still held by the bracket hook	Push the cassette back, then pull it down. If it still holds, use a flat screwdriver (see 05).
The fabric rolls unevenly	Cassette not level, or shade pulled from one side	Level the brackets (03). Operate from the centre of the bottom bar.
The shade sticks or rubs	Cassette or fabric touching the frame	Check the clearance at each side of an inside mount, and that the recess is deep enough (see 02).

CBM

Contact

Canadian Blind Manufacturing Inc. · 13040 Worster Ct, Richmond, BC V6V 2B3
604.821.1188 · sales@cblind.ca · cdnblind.com

#cbmblinds