Cellaris™ Honeycomb Shades


Cordless and Day/Night (Duo)

⚠ WARNING


STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 8-11/16″ [22 cm] or a loop larger than 17-5/16″ [44 cm] around becomes accessible.

Keep cords, chains and loops out of children's reach. Move cribs, beds and furniture away from window coverings.

01 What's in the box

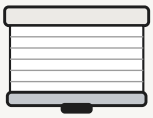

Shade, fully assembled

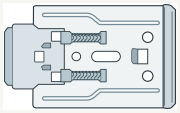

Mounting brackets (number by width, see 02)




Installation screws, 1-1/8″

Tools you need: Drill with bits · tape measure · pencil · level · screwdriver. For the two rear holes on an inside mount: #4 × 3/4″ flat-head wood screws (not included).

02 Before you start

How many brackets

Shade width	Brackets
Up to 36″	**2**
Over 36″ to 72″	**3**
Over 72″ to 96″	**4**
Over 96″ to 120″	**5**

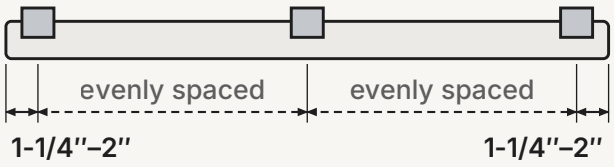

Place the end brackets 1-1/4″ to 2″ [32–51 mm] in from each end of the headrail. Space the others evenly between them.

Mounting depth

An inside mount needs at least 1/2″ [13 mm] of flat surface at the top of the frame. For the shade to sit fully inside the frame (flush mount), allow:


Cell size	Flush-mount depth
3/4″	2-1/2″ [64 mm]
1-1/4″	2-7/8″ [73 mm]

Check that window cranks, handles and locks will not get in the way of the shade.

03 Install the brackets


Mark the bracket positions. Use a level to check that all the brackets are level and in line with each other. Tighten the screws fully, so the heads sit flush.

Inside mount

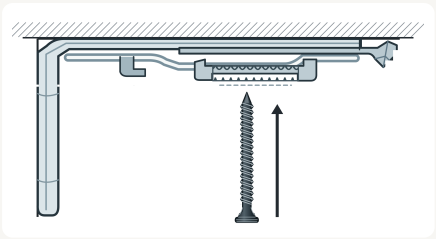

Screw through the hole in the top centre of the bracket into the top of the frame, using an included screw. Or use the two top-rear holes with #4 × 3/4″ flat-head wood screws (not included).


Outside mount

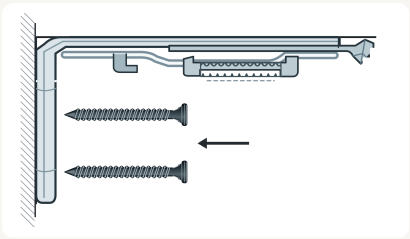

Screw through the two holes in the back of the bracket into the wall or window trim, using the included screws.

04 Hang the shade


Make sure the shade is fully raised.

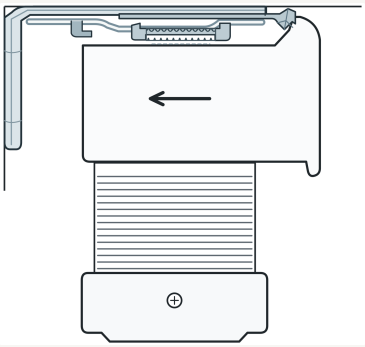

Hold the headrail level just below the brackets, front lip under the front of each bracket. Push it straight in toward the wall until it clicks on every bracket. Do not hook the front and tilt the back up.


✓ **Pull gently on the headrail to check that it is locked in.**

05 Operate the shade

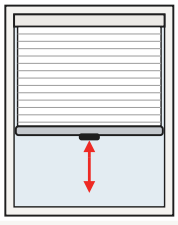

Cordless

Hold the handle on the bottom rail and raise or lower the shade to the height you want.

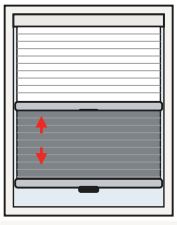

Day/Night (Duo)


The shade has two fabrics. Move the middle and bottom rails to choose which fabric covers the window.

- Wide shades have two handles on each rail. Use both hands and keep the rail level.
- Operate the shade by the handles only. Do not pull on the fabric.

Note New shade: leave it fully lowered for at least 48 hours, so the cells can relax to their full size.


06 Take the shade down

1

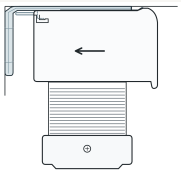


Raise the shade fully, then push the headrail toward the wall or window.

2

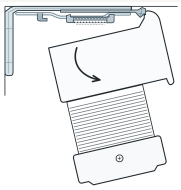

Tilt the back of the headrail down until it comes free of the brackets.

3

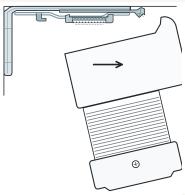

Pull the headrail forward and off the front of the brackets.

07 Hold-down brackets (optional)



Mostly used on outside mounts (doors, windows that swing or tilt open). One at each end of the bottom rail. Outside mount: screw it to the wall or trim through its back. Inside mount: screw its base to the sill. Snap the pin into the hole in the bottom-rail end cap.

08 Care and cleaning

- Dust regularly with a feather duster, or vacuum on low suction with a soft brush attachment.
- To clear dust or insects from inside the cells, blow them out with a hair dryer on the cool setting.
- Spot clean with a cloth dampened with water and mild soap. Blot, do not rub, and let the shade dry fully lowered.
- Do not soak, machine wash, steam clean or dry clean the shade. Do not use solvents or bleach.

09 Installer tips

- Unpack the shade and lower it fully as soon as it is hung: leave it down for at least 48 hours so the cells recover their shape.
- Check that the headrail has clicked in on every bracket before you operate it.
- Always lift and lower from the centre of the bottom rail. On wide shades, use both hands, one at each third.
- Run the shade fully down and up a few times after the settling time: the tension evens out and the shade holds its position.
- For a Day/Night (Duo) shade, move the middle rail and bottom rail one at a time.
- On inside mounts, check window cranks, handles and locks before you mark the brackets, and fit hold-down brackets on doors and tilting windows.

10 Troubleshooting

Problem	Possible cause	What to do
The shade won't click in, or comes off the brackets	Brackets not level or in line, screws not flush, or not clicked in on every bracket	Check the brackets with a level, line them up and tighten the screws fully. Hold the headrail level and push it straight in toward the wall until it clicks on every bracket.
A new shade won't lower fully, or the cells look flat	Fabric compressed during shipping	Leave the shade fully lowered for at least 48 hours.
The bottom rail hangs unevenly	Brackets not level, or a wide shade lifted from one side	Check the brackets with a level. On wide shades, use both handles. Lower and raise the shade fully 2 or 3 times.
The shade drifts down or won't stay up	Tension not yet even (new shade)	Lower and raise the shade fully 2 or 3 times. If it keeps drifting, contact your dealer. Do not open the headrail.

The shade creeps up or won't stay down	Lifted from one side, or tension not yet even	Lower it fully and raise it from the centre a few times. Leave it down overnight if it is new.
Duo: the middle rail drifts or will not stay put	Moved together with the bottom rail, or rail not level	Move one rail at a time, from its centre. Lower both rails fully, then set each one again.
The shade swings on a door or tilting window	No hold-down brackets	Fit the hold-down brackets (07).
The shade hits a window crank or handle	Not enough mounting depth	Change to an outside mount.

Contact

Canadian Blind Manufacturing Inc. · 13040 Worster Ct, Richmond, BC V6V 2B3
604.821.1188 · sales@cblind.ca · cdnblind.com
#cbmblinds