CR25PW Pull Wand Motor

Rechargeable · Programming instructions

⚠ WARNING

STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 8-11/16″ [22 cm] or a loop larger than 17-5/16″ [44 cm] around becomes accessible.

Keep cords, chains and loops out of children's reach. Move cribs, beds and furniture away from window coverings.

01 Features

- ✓ Pull-wand operation
- ✓ Electronic limits
- ✓ Preferred position
- ✓ Soft start and soft stop
- ✓ Stops when obstructed
- ✓ Limits kept in memory
- ✓ Adjustable speed
- ✓ Built-in lithium battery
- ✓ USB-C charging

02 Safety

Motor and shade


- For indoor use only. Do not use outdoors or in damp locations.
- Keep the motor dry. Do not spray water or any other liquid on it.
- Do not install near a heat source.
- Do not open or repair the motor yourself. Repairs must be done by an authorized professional.
- Do not let children play with the shade or the wand. Keep people clear until the shade stops.

Built-in lithium battery

- Charge only with a 5 V, 2 A USB-C charger. Do not use a damaged charger or cable, and do not charge a wet or damaged motor.
- Do not puncture, crush or burn the motor, and do not try to remove the battery.
- If the motor gets very hot, swells, smokes or smells unusual, unplug the charger and stop using it.
- Do not put the motor in household waste. Take it to a battery recycling drop-off.

03 Product overview

Motor head

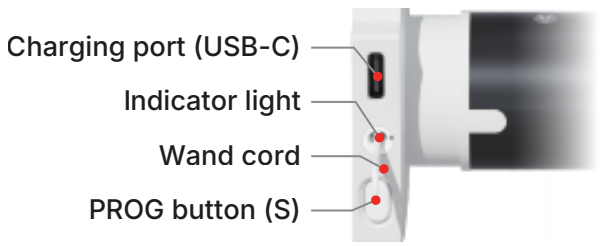


Charging: use a 5 V, 2 A USB-C charger, such as the CBM DC10MC. A full charge lasts about 4 to 8 months, depending on use. **Low battery:** if the red light flashes 5 times when you pull the wand, recharge the motor soon.

Indicator light	Meaning
Red	Low battery or error
Orange	Setting in progress
Green (brief)	Normal confirmation
Green flashing	Charging
Green steady	Fully charged (charge 1 more hour for best battery life)

04 Setup

Complete these steps in order the first time you install the motor. The motor confirms each setting step with a jog, a brief back-and-forth movement.

4.1 Activation

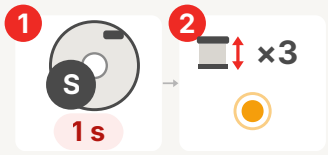


1. Press S PROG on the motor for 1 s
2. Motor jogs 3 times and the orange light stays on

✓ Motor activated

After 2 minutes without use, the motor goes to sleep. Activate it again.


4.2 Moving the shade with the wand

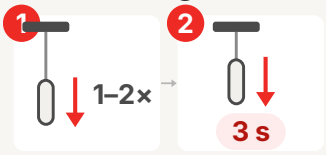

1. Pull the wand once or twice to choose the direction
2. Pull and hold for 3 s: the shade keeps moving

Normal up and down movement is not a jog.

4.3 Setting the upper limit

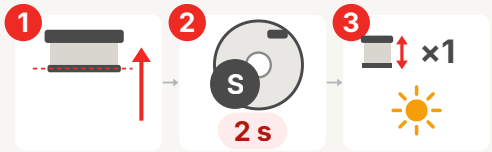

1. Use the wand to run the shade to the desired upper position
2. Press S PROG on the motor for 2 s
3. Motor jogs once and the orange light flashes

✓ Upper limit set

4.4 Setting the lower limit




1. Use the wand to run the shade to the desired lower position
2. Press S PROG on the motor for 2 s
3. Motor jogs once and the orange light turns off

✓ Limits saved

05 Function settings

Optional. Complete section 04 first.

5.1 Fine-tuning a limit

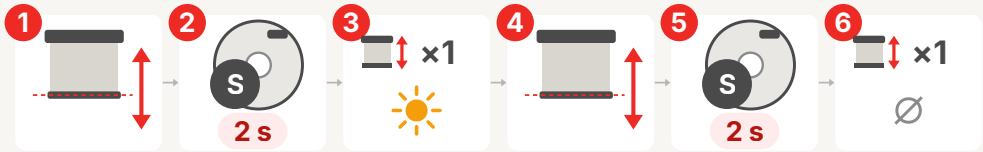


1. Run the shade to the upper or lower limit you want to adjust
2. Press S PROG on the motor for 2 s
3. Motor jogs once and the orange light flashes
4. Use the wand to run the shade to the new limit position
5. Press S PROG on the motor for 2 s
6. Motor jogs once and the orange light turns off

✓ Fine-tuning complete

Important Do not connect the charger while fine-tuning, or the motor returns to its factory settings.

5.2 Speed: high or low

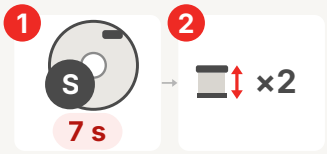


1. Press S PROG on the motor for 7 s
2. Motor jogs twice: the speed switches between high and low

✓ Speed changed

The shade must be between the upper and lower limits.

5.3 Preferred position: set or delete

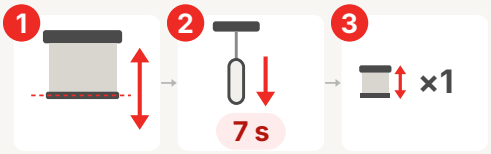

1. Run the shade to the desired position (between the two limits)
2. Pull and hold the wand for 7 s
3. Motor jogs once


✓ Preferred position set or deleted

To use it: from any other position, pull and hold the wand for 3 s. The shade moves to the preferred position.

06 Factory reset

Use this if something goes wrong and you want to start over.

6.1 Restoring factory settings

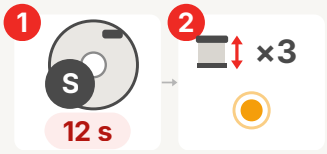

1. Press and hold S PROG on the motor for 12 s
2. Motor jogs 3 times and the orange light stays on

✓ Factory settings restored

All limits and settings are erased. After 2 minutes without operation the motor goes into sleep mode. Start again from section 04.

Contact

Canadian Blind Manufacturing Inc.
13040 Worster Ct, Richmond, BC V6V 2B3
604.821.1188 · sales@cblind.ca · cdnblind.com

01 Rechargeable lithium-ion battery

- This product contains a rechargeable lithium-ion battery. Charge it only with a CBM charger, solar panel or battery pack approved for it, and follow the charging instructions in this guide.
- Do not crush, puncture, open or heat the battery, and do not expose it to fire or water.
- Do not dispose of lithium-ion batteries in household trash. Recycle them at a battery drop-off location, for example through Call2Recycle (call2recycle.org, 1-877-723-1297), or as your state or local rules require.