Fascia System Roller Shades


3″ and 4″ fascia · chain drive or motorized

⚠ WARNING


STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 8-11/16″ [22 cm] or a loop larger than 17-5/16″ [44 cm] around becomes accessible.

Keep cords, chains and loops out of children's reach. Move cribs, beds and furniture away from window coverings.


01 What's in the box

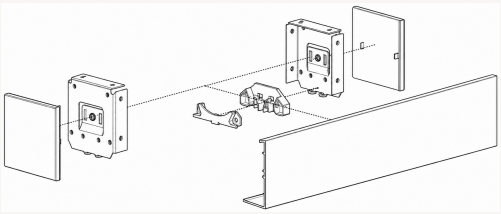

3″ fascia: fascia cover, two brackets, two bracket covers and the chain guide (chain drive)

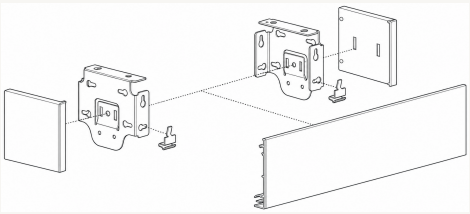

4″ fascia: fascia cover, two brackets, two bracket covers and two fascia clips

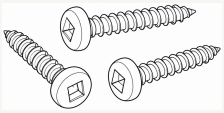

Installation screws (1-1/8″ pan-head, #2 Robertson). The shade comes fully assembled.

Tools you need: Drill with bits · tape measure · pencil · level · #2 Robertson (square) driver · slotted screwdriver or the CBM Shade Removal Tool (to take the shade down).

02 Before you start

This guide covers the 3″ and 4″ fascia, for chain drive and motorized shades. Steps marked with a size or "chain drive" apply only to that shade; everything else applies to all.

Brackets

Each shade hangs on **two brackets, one at each end**. There is no centre support: wider shades are built on a larger tube. The fascia width is the overall width; mount the brackets so the fascia ends line up with the ends of the opening or your marks.

Check that window cranks, handles and locks will not get in the way of the shade.

Fascia size

Fascia	Height	Depth
3″	3-7/16″ [87]	3-5/16″ [84]
4″	3-15/16″ [100]	4-3/16″ [106]


Depth is measured to the wall face. For a flush inside mount, the window recess must be at least this deep.

Important Brackets that are not level and in line make the fabric drift to one side and can damage it.


03 Install the brackets

The brackets are universal: screw them up into the top of the frame (inside mount), into the ceiling, or into the wall. Use a level to check that both brackets are level and in line.


3″

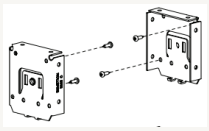

Inside mount

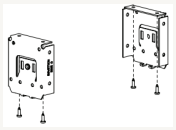


Ceiling

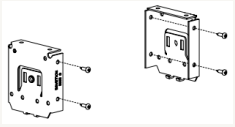


Wall


4″

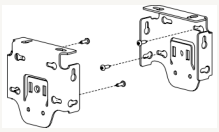

Inside mount

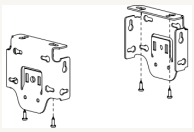

Ceiling

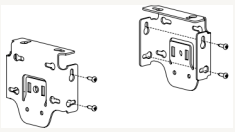


Wall

04 Hang the shade

Keep the shade rolled up. The order is different for the two sizes.


3″

1

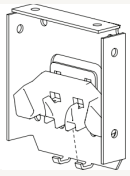


Chain drive: snap the chain guide onto the control-side bracket.

2

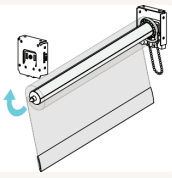


Put the control end (clutch or motor) in first, then swing the idler end up into its bracket.

3

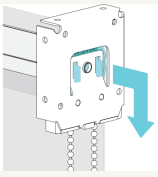

Check that the hooks on the control end are fully engaged.


4

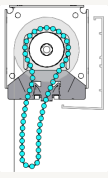

Chain drive: seat the chain in the guide (the same position for every clutch). This leaves room for the fascia.


4″

1

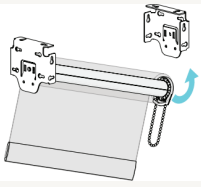


Compress the idler and seat the idler end first, then swing the control end (clutch or motor) up to its bracket.

2

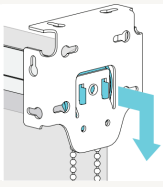

Check that the hooks on the control end are fully engaged.

3

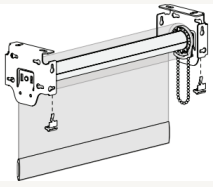


Fit the bracket clip at each bracket.

✓ **Pull gently on the shade to check that it is locked in.**


05 Fit the fascia cover



3″, chain drive: current clutches need no chain guide cover. Small clutches on older shades (SL10, SL15) take a cover: clip it on, and secure it with screws if needed.

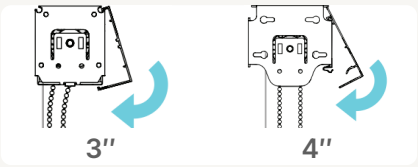

Hook the top of the fascia cover on first, then swing it down into place.

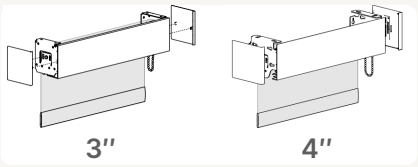

Outside mount: push the bracket covers onto both ends.

06 Take the shade down

1. Take off the fascia cover (and the bracket covers).
2. Support the shade. At the idler end, put a slotted screwdriver against the idler and push it in, toward the centre of the shade, until the idler end comes free.
3. Lower the idler end, then lift the control end off its bracket.

Tip The **CBM Shade Removal Tool** (sold separately, shown at right) does the same job as the screwdriver, more easily.



07 Operate the shade

Chain drive: pull the front or back of the chain straight down to raise or lower the shade; keep the chain in its shield and out of reach of children. Motorized: see the motor's programming instructions.

08 Care and cleaning

- Dust the fabric and the fascia regularly with a feather duster, or vacuum on low suction with a soft brush attachment.
- Spot clean with a cloth dampened with water and mild soap. Blot, do not rub, and let the shade dry fully lowered.
- Do not soak, machine wash, steam clean or dry clean the fabric. Do not use solvents or bleach.

09 Installer tips

- Hang the shade in the order shown for your fascia size (04): the wrong end first is the most common reason a shade will not hook on.
- Keep the shade rolled up while hanging it, and support its weight until both ends are seated.
- Check that the chain hangs straight down through the chain guide before fitting the cover.
- Fit the fascia cover last, and check that it is level with the brackets along its whole length.
- Keep the slotted screwdriver or the CBM Shade Removal Tool on hand: the shade comes down by pushing the idler in (06).
- On inside mounts, check the clearance at each end so the fabric does not rub on the frame.

10 Troubleshooting

Problem	Possible cause	What to do
The control end won't hook on	Ends put in the wrong order, or brackets not in line	Follow the order for your size (see 04). Check the brackets with a level.
The fabric drifts to one side	Brackets not level or not in line	Take the shade down, level and line up the brackets, then hang it again.

The chain rubs or catches (3″)	Chain guide not fitted, or chain not seated in it	Refit the chain guide on the control-side bracket and seat the chain in it (see 04).
The fascia cover sits crooked or won’t clip on	Brackets not in line, or cover not seated on both brackets	Check the brackets with a level, then refit the cover, pressing it on at each bracket (05).
The fabric rubs on an end	Not enough clearance in an inside mount, or shade off-centre	Re-seat both ends. Check the clearance at each side of the frame.
The shade won’t come down off the brackets	Idler not pushed in far enough	Push the idler in fully with the screwdriver or the Shade Removal Tool (see 06).

CBM

Contact

Canadian Blind Manufacturing Inc. · 13040 Worster Ct, Richmond, BC V6V 2B3
604.821.1188 · sales@cblind.ca · cdnblind.com

#cbmblinds